


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0362

**WARNING:** TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

**NOTES:** 1. Before installing, consult local electrical codes for wiring and grounding requirements.  
2. READ AND SAVE THIS INSTRUCTION.


## Hardware Package (included):

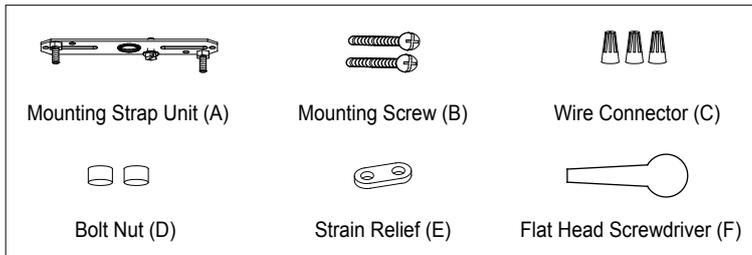

## Installation Steps

Turn off the power at fuse or circuit box.

- Loosen the plastic headless screw on the canopy by using a flat head screwdriver (F).
- Measure the desired length of the cord (a) from the canopy to the shade and leave additional 9" cord (b) above the canopy (include the canopy), then cut off the unnecessary cord. (See Fig.1)
- Adjust strain relief at 9" position from the top of the cord.
- Mark the 3" cord (c) from the top of the cord (b). Use a knife to peel off the insulation of the cord (c) carefully to show the 3 inside wires. (See Fig.1)  
**Caution : Cutting too deep may cut off three inside wires and destroy the insulation surface of the three inside wires.**
- Peel off the 3 wires from the top about 3/8" long (d) to expose the copper for wiring.
- Attach the mounting strap unit (A) to outlet box by using two mounting screws (B).
- Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
  - Connect the hot wire (black insulation) from the fixture to the black wire from the power source.
  - Connect the neutral wire (white insulation) from the fixture to the white wire from the power source.
  - Attach the fixture ground wire (green insulation) to the house ground wire with a wire connector (C).
 Carefully put all of the wires back into the outlet box.

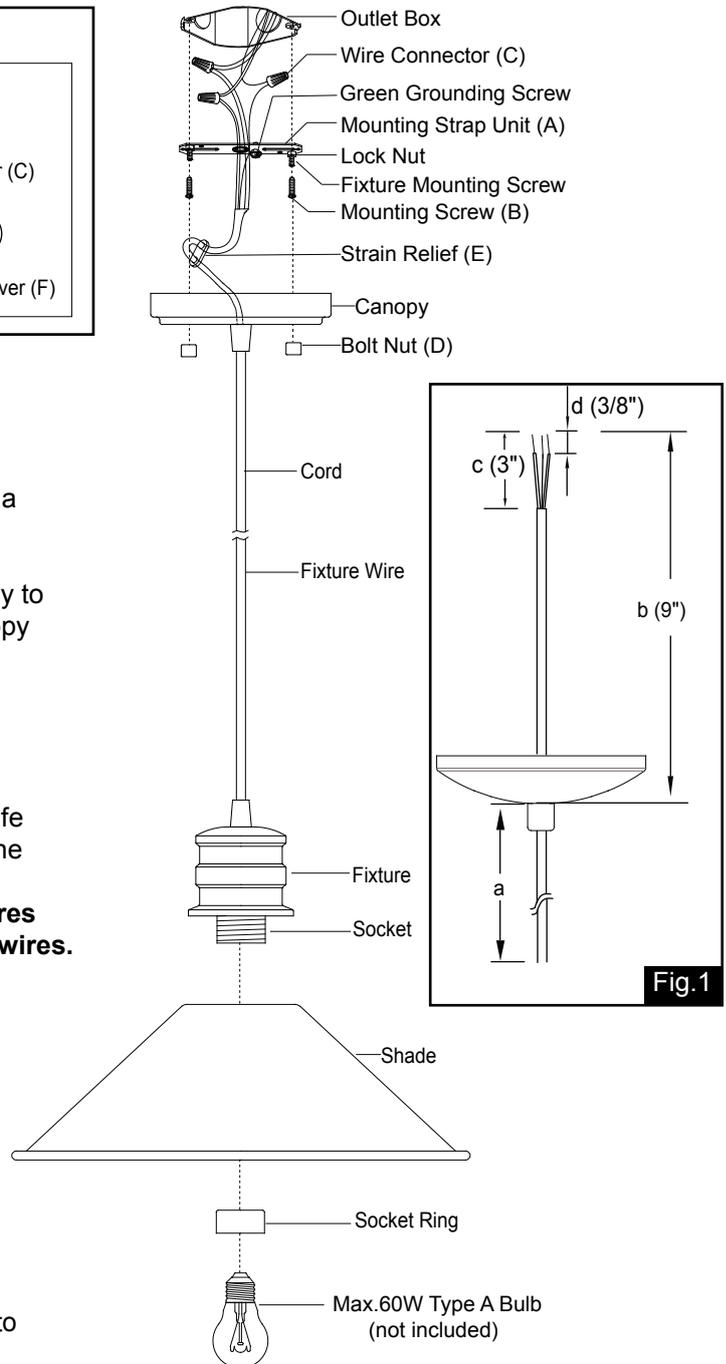


8. Pull the cord down slightly until the strain relief (E) touches the hex nut. Attach the canopy to the mounting strap unit (A) by inserting two fixture mounting screws, then secure it with two bolt nuts (D).
9. Fastening cord by screwing plastic headless screw, using flat head screwdriver (F).
10. Attach the shade to fixture, then secure it with the socket ring.
11. Install a bulb (not included). Check relamping label at socket area or packaging for maximum wattage allowed .

**Turn on the power at fuse or circuit box.**

The following parts are available for re-order if damaged or missing.

**Spare Parts List:**

			Assembly Kit 6430MM (1 SET)
Mounting Strap Unit (A)	Mounting Screw (B)	Wire Connector (C)	
			 Socket Ring 5906SR
Bolt Nut (D)	Strain Relief (E)	Flat Head Screwdriver (F)	

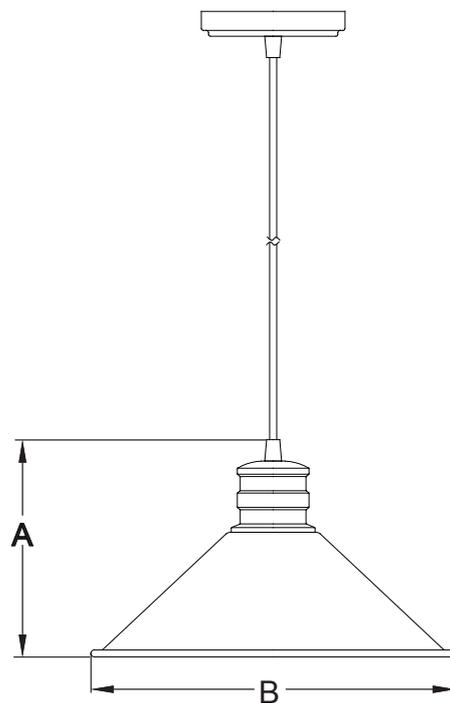

**A: 7-1/4"**

**B: 12"**